 


Overview and Quick Start

Device layout

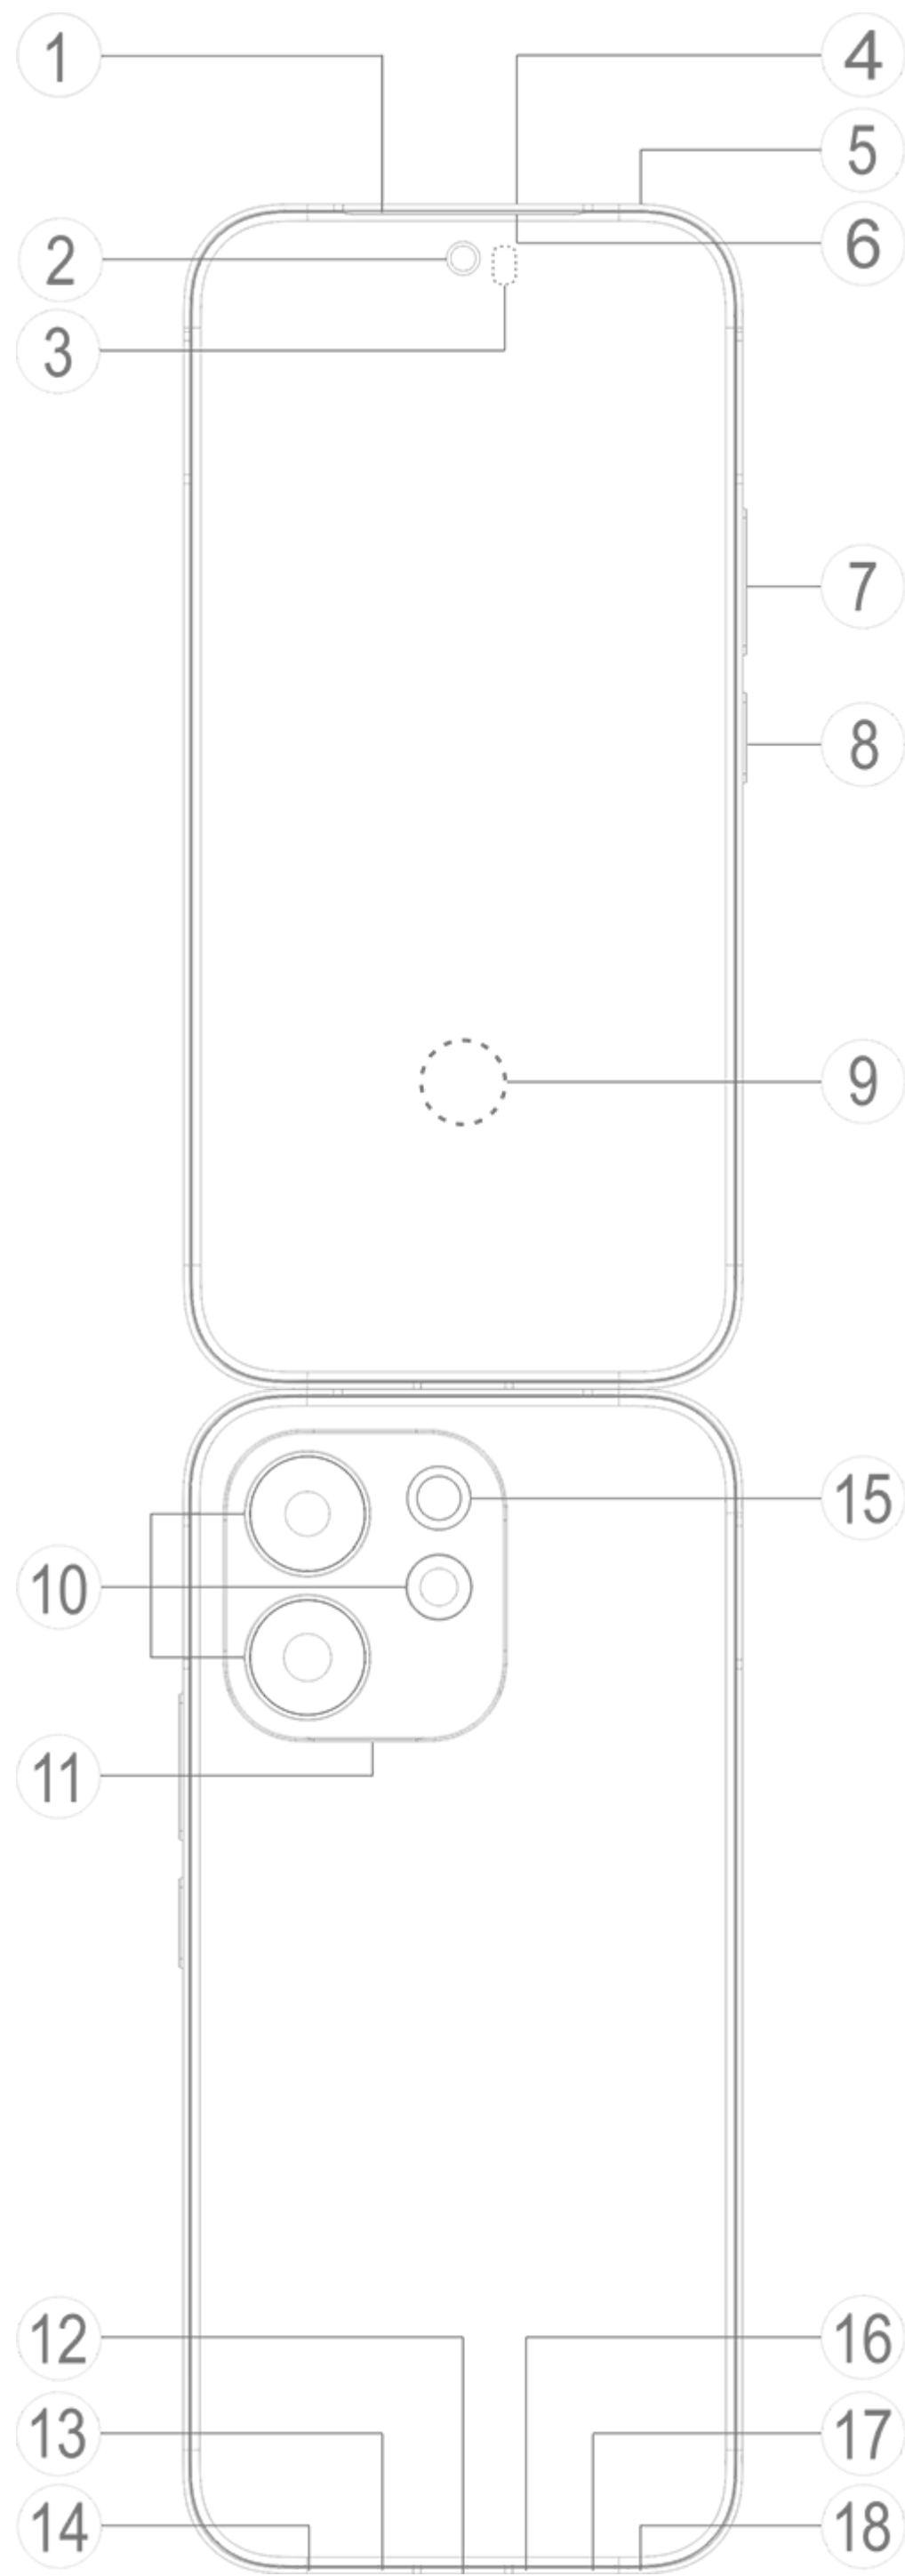

Note

The illustrations in the Manual are for reference only. Options may vary by device model.

Buttons and components

- ① **Receiver & Speaker:** Play audio during a call. Play sound.
- ② **Front camera/⑩ Rear camera:** Take photos or record videos.
- ③ **Ambient light sensor & Proximity sensor:** Automatically detects ambient brightness and adjusts the screen brightness accordingly.
Automatically turns off the screen when your phone is brought close to your ear during calls or when the phone is in your pocket to prevent accidental touches.
- ④ **Microphone:** Transfers sound when you make calls.
- ⑤ **Infrared blaster:** Controls household appliances by sending infrared coded signals.
- ⑥ **Proximity sensor:** Automatically turns off the screen when your phone is brought close to your ear during calls or when the phone is in your pocket to prevent accidental touches.
- ⑦ **Volume buttons:** Adjust the volume.
- ⑧ **Power button:** Press and hold the button to power on or off your phone.

Note

When your phone can't work properly, press and hold the Power button and Volume down button for at least 10 seconds to force restart it.

- ⑨ **Screen fingerprint:** Identifies your fingerprints, enabling you to unlock your phone without a password.
- ⑪ **Microphone:** Transfers sound when you make calls.
- ⑫ **USB port:** A standardized interface for connecting your device to earphones, charger, computer, or other compatible device.
- ⑬ **Air pressure balance hole:** Don't block or cover it.
- ⑭ **Speaker:** Used to play audio.
- ⑮ **Aura light & Flash:** flashlight source, which helps improve photo or video effects.

⑩ **Microphone:** Transfers sound when you make calls.

⑪ **Tray:** Accommodates the SIM card.

⑫ **Pinhole:** Insert the pin into the pinhole and press it inwards to eject the card tray.

 
Set up and get started

Insert a SIM card


⚠️ Note: Depending on your region or carrier, you may get a single or dual SIM phone, but the differences between the two versions are not fully covered in the Manual. The illustrations in the Manual are for reference only. Options may vary by device model.

You can insert a nano-SIM card (SIM 1 or SIM 2) with no need to turn your device off. When turned on, it will automatically identify whether you have inserted a nano-SIM card (SIM 1 or SIM 2). Your device uses nano-SIM cards (SIM 1 or SIM 2).


1. Insert an eject pin into the hole, push it all the way into the hole until the tray ejects, and then pull the tray out.

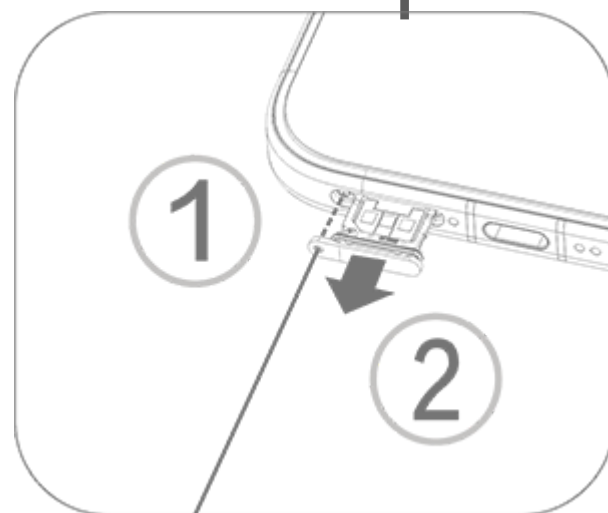

 2. Place your nano-SIM card into the SIM 1 or SIM 2 holder in the direction of the arrow as shown in the illustration. Make sure to align the angled corner to the notch on the holder.

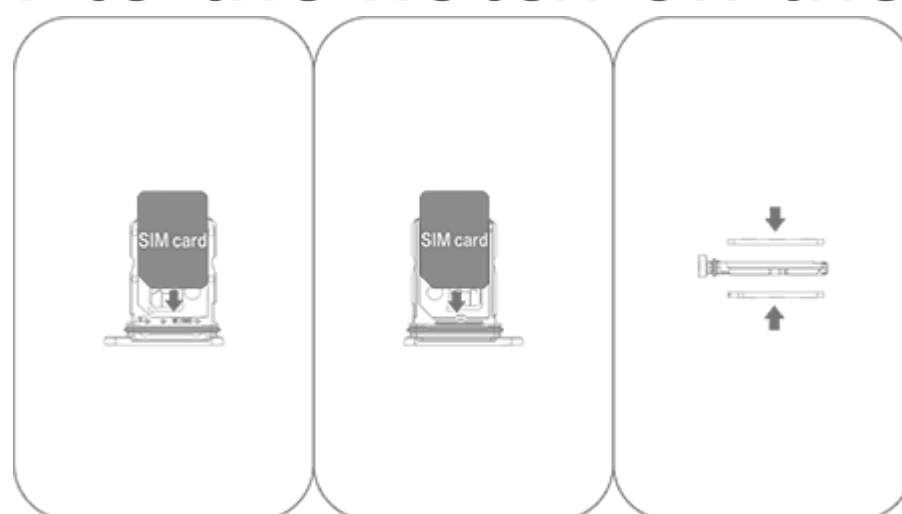

 3. Hold your device face up, and then slide the tray all the way into the slot in the direction as indicated by the arrow.

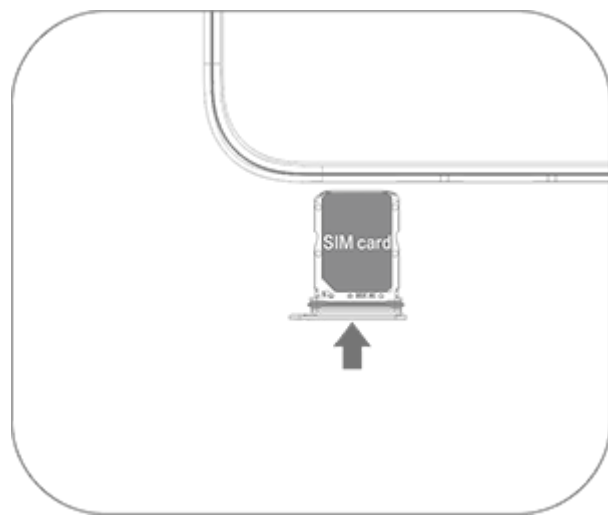

Note

1. Do not remove the back cover to avoid damaging your device.
2. Do not insert the nano-SIM card (SIM 1 or SIM 2) directly into the slot of your phone.
3. Trying to trim the nano-SIM card yourself may lead to card damage or cause serious damage to your device. If the nano-SIM card (SIM 1 or SIM 2) doesn't match your device, go to your carrier and request a replacement with a standard-sized card.

 
Antenna

Your device is equipped with a built-in antenna. Don't touch the antenna when it is transmitting or receiving signals. Touching the antenna may compromise the communications quality, cause your device to function at an unnecessarily high power level, as well as shorten the battery life.

The antenna is located inside the area marked with dotted lines as shown in the illustration below. Don't cover this area when holding your device.

A. GPS/Wi-Fi/Communications antenna.

B. Communications antenna.

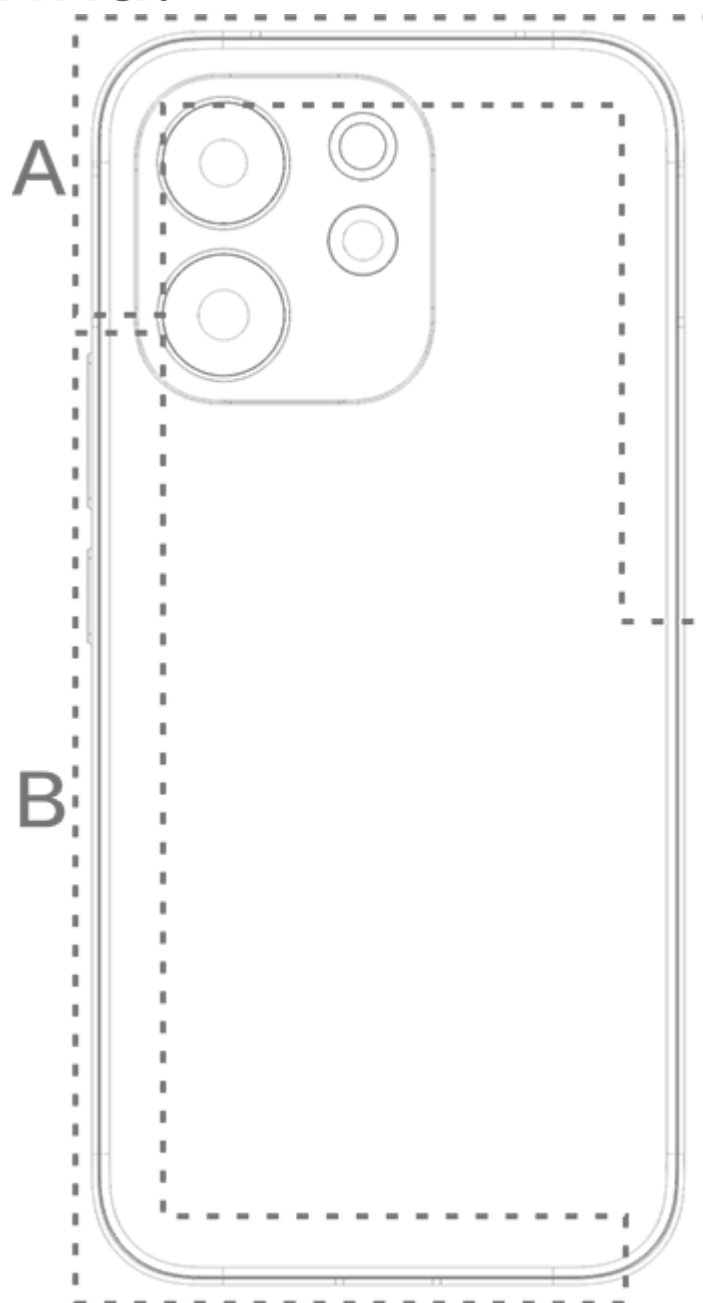

 Note

The illustrations in the Manual are for reference only. Options may vary by device model.

Basic gestures

Get familiar with basic gestures to interact with your device better.

Basic gestures

	Tap the screen
	Swipe up
	Swipe down
	Swipe right
	Swipe left
	Pinch in on the screen
	Pinch out on the screen

Status icons

Status icons appear in the status bar at the top of the screen. See the table below for common status icons and their meanings.

	Signal strength
	No signal
	Airplane mode on
	Wi-Fi on
2G/G/E	2G on
3G/H/H+	3G on
4G/ 4G+	4G on
5G	5G on
LTE/LTE+	LTE on
	Bluetooth device connected
	Vibration mode on
	Silent mode on
	Do Not Disturb on
	New message
	Missed call
	Alarm on
	Battery level
	Charging
	Data-saving mode on
	Hotspot on
	Location on
	VPN connected

	Screen Mirroring on
	Record screen on
	Earphones connected
	NFC on

 Note

- 1. The network symbols may differ depending on your carrier and network settings.
- 2. The icons may vary by device model. The status icons in the above table are for reference only.
- 3. The 5G icon is for illustrative purposes only and will only be visible on phones with 5G capabilities.

Turn on or off your device

Turn off your device

To power off your device, press and hold the Power button and Volume up button simultaneously and then swipe  rightward.

Turn on your device

To turn on your device, press and hold the Power button until your device vibrates.

 Note

When your device is very low on power, it will display an image of a nearly depleted battery. Charge your device to use it.

Restart your device

To restart your device, press and hold the Power button and Volume up button simultaneously and then swipe  rightward.

Force restart your device

Press and hold the Power button and Volume down button simultaneously for at least 10 seconds to force restart your device.

Charge your device

When the battery is running low, you will be prompted to charge your device.

Charge via a USB cable

To charge your device via a charger and a USB cable:

1. Connect the charger to your device via a USB cable.
2. Plug the charger into a power outlet.
3. Disconnect the charger when your device is fully charged.

Note

To ensure charging safety, use the charger and USB cable compatible with your device.

Charge with a wireless charger

To charge your device wirelessly:

1. Place your device on the center of the wireless charger with the screen facing upwards.
2. Plug the charger into a power outlet.
3. Disconnect the charger when your device is fully charged.

Note

This feature is only available on devices that support wireless charging.

Connect to earphones

You can connect earphones to your device to listen to music or watch movies in private.

Connect to wireless earphones

Method:

1. Turn on the wireless earphones and make sure they are in discovery mode.
2. Use your device to search for and pair with these earphones in the following ways:
 - 2.1 Go to **Settings > Bluetooth** and turn on **Bluetooth**.
 - 2.2 Tap the name of the Bluetooth device to be paired with your device in **Available devices**.
 - 2.3 Follow the on-screen instructions to connect.
3. Once connected, the **Bluetooth** screen will display the connected device.

Note

The steps may vary depending on the earphones. Refer to the earphone manual for details.

Connect to wired earphones

Method:

Plug the earphones directly into the earphone jack and ensure they are securely plugged in.

Note

Some devices have a combined USB and earphone jack.

Adjust the volume

When you make or answer calls or stream multimedia files on your device, you can use the side buttons to turn the volume up or down.

Press and hold the volume buttons to adjust the volume

When you stream multimedia files on your device, press the Volume up or down button to turn the volume up or down.

Quickly mute your device

- When your device rings for

To remove a language, make sure there

-

Path:

-

3. To restore to the original system and app

Method 2:

2. Do any of

-

